


# DH-32 Operation Manual

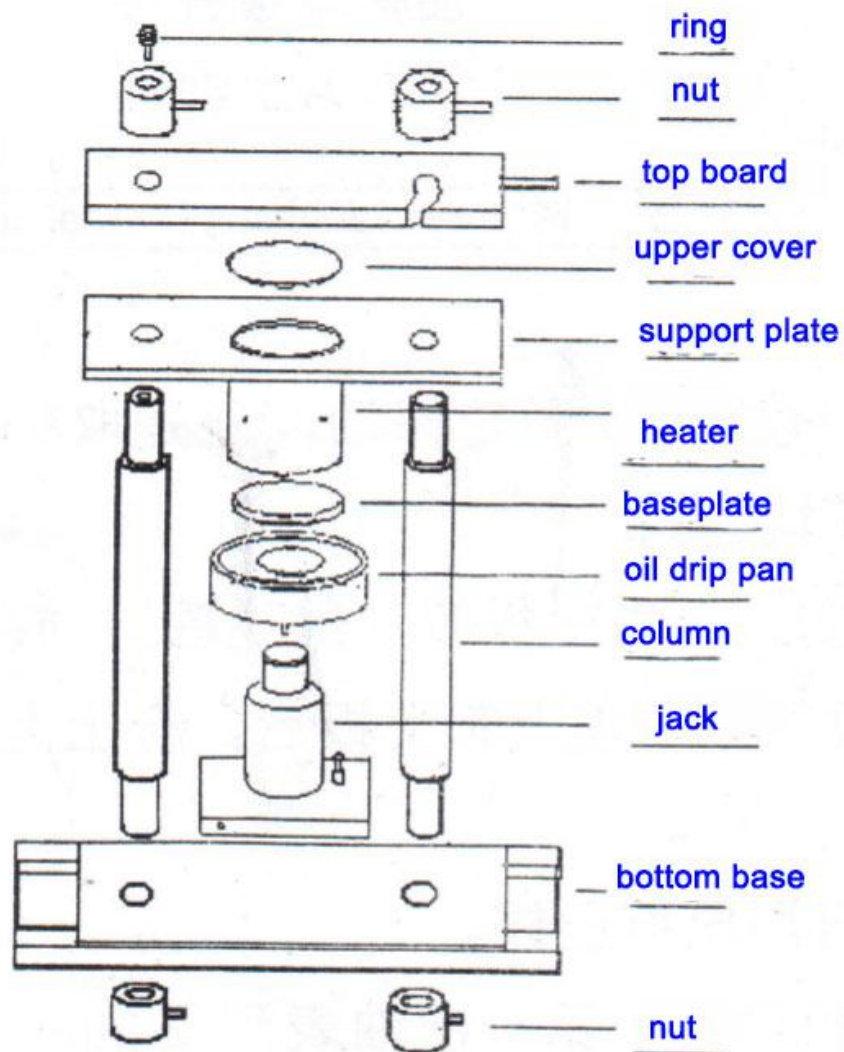

## Exploded View

### Operation Process:

1. Unscrew the upper nut, but do not remove, and rotate the top board (180 degrees).

2. Remove the upper cover with a magnet and return the jack to the lowest position, then pour raw materials into the charging bucket.
3. Cover the upper cover, make the top board back to the original position and tighten the nut.
4. Connect to the power and heat the charging bucket if necessary.
5. Press the handle up and down to start pressing (oil comes out after continuously pressing about 5 minutes, and the batch will be finished in about half an hour).

Attention: At the beginning you can press faster, when you feel the pressure increase, you can slow down a little. Do not force to press when you feel the pressure is too large to continue, otherwise may damage the jack or other parts. Work according to personal strength.

6. Pressure relief. There is a pressure-relief hole on the base. After pressing, insert the red steel bar into the hole and rotate anticlockwise to release the pressure. Then loosen the nut, rotate the top board 180 degrees and tighten the nut again. Remove the upper cover with a magnet and press the handle to push the cake out of the charging bucket.

(Attention: Don't raise the cake too high otherwise the jack will be hard to return, raise to height of just being able to take out the cake is OK)

7. After pressure relief, use the iron rod with a hook to hook the ring on the column, then press against the iron pipe (first the short pipe, then the long pipe) to return the jack to the lowest position.